INSTALLATION AND USING INSTRUCTIONS

CERAMIC FAN HEATER

SPLITTO

GENERAL CARE AND SAFETY GUIDE

- Read all instructions before using this appliance and keep them for future reference.
- Use only the voltage specified on the rating plate of the fan heater.
- Do not cover or restrict airflow from the inlet or exhaust grilles in any manner as the appliance may overheat and become a fire risk.
- Keep all objects at least 1 meter from the front, sides and rear of the appliance.
- Do not place appliance close to a radiant heat source.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Do not use the appliance to dry clothes.
- Use the fan heater in a well ventilated area.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunctions has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer .
- The most common cause of overheating is dust or fluff deposits in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning air vents and grilles.
- Do not use abrasive cleaning products on this appliance. Clean with a damp (not wet) cloth rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- This appliance heats up slightly when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Always operate on a dry flat horizontal surface.
- Do not use on soft surfaces, like a bed, where openings may become blocked.
- Do not operate with cord set coiled up as a build up of heat is likely, which could be sufficient to become a hazard.
- The use of an extension cord with this appliance is not recommended.
- Do not remove plug from power socket until the appliance has been switched off and cooled down.
- Do not remove plug from power socket by pulling the cable - always grip plug.
- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces or free flames during operation.
- Do not run cord under carpets, throw rugs or runners etc. Arrange cord away from traffic areas so that it will not be tripped over.

- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area before use.
- Do not store appliance while it is still hot.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure they do not play with the appliance.
- The appliance must not be located immediately below a socket-outlet.
- Do not use this appliance in the immediate surrounds of a bath, a shower or a swimming pool or other liquids.
- If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.
- Do not allow the power cable to hang down over the edge of the sink, worktop or table.
- Make sure your hands are dry when you use the appliance, the cable or the plug.
- Never immerse the appliance into water or other liquids.
- Do not use the appliance near explosives or flammable materials.
- Always switch off the appliance:
    - if it does not work while using it;
    - before making maintenance;
    - before inserting or removing accessories;
    - before removing the plug;
    - when you finish to use the appliance.
- Never switch the appliance off by pulling the cable.
- This heater has been projected in order to install it on the wall, you should keep 1,8 m from the floor and at least 25 cm from the two sides of the wall. Do not put it on the floor.

STRUCTURE AND PARTS

Wind in
Remote control: inside a small space on the right side of the unit, covered by a sliding door.
Main switch
Wind out cover
Control panel

REMOTE CONTROL – CONTROL PANEL and LCD DISPLAY ON THE UNIT

By the top, buttons on remote control correspond to following functions:
1 - ionizer
2 - swinging of horizontal flaps
3 - heating
4 - left: room thermostat; right: timer
5 - power (on/off)

By left, the symbols on the control panel of the unit correspond to following functions:
1 - swinging of horizontal flaps
2 - room thermostat
3 - heating
4 - power (on/off).
LCD display contains the symbols concerning "swing", "fan" - "H": High heating capacity (2000W) ;"L": Low heating capacity (1000W).

INSTALLATION INSTRUCTIONS

The fan heater must be installed on a wall before operating. Installation sequence of the fan heater as follows:

1. Find a space where installing the fan heater (See fig.1).

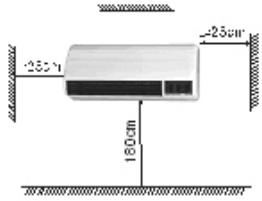

Figure 1

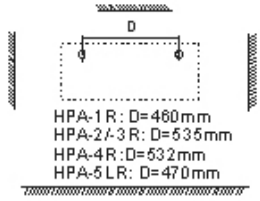

Figure 2

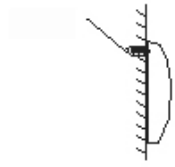

Figure 3

2. Drill two holes suit to the dimension of expansible tube in the proper wall (See figure 2).
   SPLITTO: D= 470 mm
3. Insert the expansible tubes into the holes and tighten them with screws provided firmly.
   NOTE: Do fasten the screws tight. Do not fasten the screw into the expansible tube thoroughly; the length of the bared parts should be kept 3-5 mm.
   Mount the fan heater to the wall (See figure 3). Make sure the two holes located on the back of the heater do aim at the above two screws, then push the heater backwards to the wall, and then downwards till stabilities the unit.

INSTRUCTIONS FOR USE

Turn off all the controls of the fan heater, and then plug the power plug directly into a standard grounded AC outlet. Be sure plug fits tightly into outlet.

The fan heater includes an overheat protection system that shuts off the appliance when parts of it are getting too hot.

To completely shut the fan heater off, turn all the controls to OFF, and remove plug from the socket-outlet normally.

a. Press the button ON/OFF to activate the fan-motor and check if it operates normally. The power pilot light will be illuminated. And the LED display will show the current ambient temperature.

b. Press the button HEAT to choose the desired power. Press once or more the power will cycle as below:

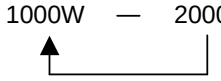

The pilot light corresponding to the selected power will be illuminated.

c. If you want to enlarge heating area in your room, press the button SWING, the swing bar will swing and the fan heater will heat your room in large scope, the swing pilot light will be illuminated. To stop swing, just press the button SWING again, the swing pilot light will go out.

d. This heater has a sensitive temperature detector, which automatically monitors the current ambient temperature and switches the unit on to maintain your room temperature once you start the heater heat your room.

The temperature default is 30℃, if you want to select a desired room temperature, just press the TEMP. button to set a desired temperature level, the range is between 15-36 ℃. If the selected temperature is higher than the actual room temperature, the appliance will start automatically and rapidly heat the room until it reaches the selected temperature. The unit will automatically maintain the temperature at a constant level.

e. The function of item a-d can be carried out with your remote control by pressing the corresponding function button. Other than the above, you can use the REMOTE CONTROL to select a desired timing level. Just press the button TIMER once or more, the time will show on the LED display and cycle as below: the range is between 1-8 hours. The TIMER pilot light will be illuminated.

MAINTENANCE INSTRUCTIONS

1. Always remove the plug from the socket-outlet and allow the fan heater cool down before cleaning it.
2. Use a damp cloth to wipe the exterior of the fan heater to remove dust and dirt.
3. Do not let water go into the appliance.
4. Do not use benzene, solvents or abrasive compounds in order to clean the product, since these could damage the casing of the unit.
5. Use a vacuum cleaner to remove dust and fluff from the inlet and outlet grilles.
6. Ensure the heater is dry before plugging back into the mains supply.
7. Do not use metallic devices in order to clean the appliance. Metallic fragments could loose and insert into the electric parts of the appliance and cause a short circuit.
8. To store away the heater, put the heater back into its original package and store it in a clean dry place.
9. In case of malfunction or damages to the appliance, please refer to a technical centre to repair it.

www.argoclima.com

EG **INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE 2002/96/EC**

At the end of its working life this equipment must not be disposed of as an household waste.
It must be taken to special local community waste collection centres or to a dealer providing this service.
Disposing of an electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources.
In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

I **INFORMAZIONE PER IL CORRETTO SMALTIMENTO DEL PRODOTTO AI SENSI DELLA DIRETTIVA EUROPEA 2002/96/CE**

Alla fine della sua vita utile questo apparecchio non deve essere smaltito insieme ai rifiuti domestici.
Deve essere consegnato presso appositi centri di raccolta differenziata oppure presso i rivenditori che forniscono questo servizio.
Smaltire separatamente un apparecchio elettrico ed elettronico consente di evitare possibili effetti negativi sull'ambiente e sulla salute umana derivanti da uno smaltimento inadeguato e permette di recuperare e riciclare i materiali di cui è composto, con importanti risparmi di energia e risorse.
Per sottolineare l'obbligo di smaltire separatamente queste apparecchiature, sul prodotto è riportato il simbolo del cassonetto barrato.
Lo smaltimento abusivo del prodotto da parte dell'utente comporta l'applicazione delle sanzioni amministrative previste dalla normativa vigente.

F **AVERTISSEMENT POUR L'ELIMINATION CORRECT DU PRODUIT AUX TERMES DE LA DIRECTIVE EUROPEENNE 2002/96/CE**

Au terme de son utilisation cet équipement ne doit pas être éliminé avec les ordures ménagères.
Le produit doit être remis à l'un des centres de collecte sélective locaux ou auprès des revendeurs assurant ce service.
Eliminer séparément un équipement électrique et électronique permet d'éviter des potentielles retombées négatives pour l'environnement et la santé humaine dérivant d'une élimination incorrect et permet de récupérer les matériaux qui le composent dans le but d'une économie importante en termes d'énergie et de ressources.
Pour rappeler l'obligation d'éliminer séparément ces équipements, le produit porte le symbole d'un caisson à ordures barré.

D **HINWEIS FÜR DIE KORREKTE ENTSORGUNG DES PRODUKTS IN ÜBEREINSTIMMUNG MIT DER EUROPÄISCHEN RICHTLINIE 2002/96/EG**

Am Ende seiner Nutzzeit darf dieses Gerät nicht zusammen mit dem Hausmüll beseitigt werden.
Es darf zu den örtlichen Sammelstellen oder zu den Fachhändlern, die einen Rücknahmeservice anbieten, gebracht werden.
Die getrennte Entsorgung eines elektrischen und elektronischen Gerätes vermeidet mögliche negative Auswirkungen auf die Umwelt und die menschliche Gesundheit, die durch eine nicht vorschrichtsmäßige Entsorgung bedingt ist. Zudem ermöglicht wird die Wiederverwertung der Materialen, aus denen sich das Gerät zusammensetzt, was wiederum eine bedeutende Einsparung an Energie und Ressourcen mit sich bringt
Zur Erinnerung an die Verpflichtung, die diese Geräte getrennt zu beseitigen, ist das Produkt mit einer durchgestrichen Mülltonne gekennzeichnet.

E **ADVERTENCIA PARA LA ELIMINACIÓN CORRECTA DEL PRODUCTO SEGÚN ESTABLECE LA DIRECTIVA EUROPEA 2002/96/CE**

Al final de su vida útil, este equipo no debe eliminarse junto a los desechos domésticos.
Debe entregarse a centros específicos de recogida diferenciada locales o a distribuidores que facilitan este servicio.
Eliminar por separado un equipo eléctrico y electrónico significa evitar posibles consecuencias negativas para el medio ambiente y la salud derivadas de una eliminación inadecuada y permite reciclar los materiales que lo componen, obteniendo asi un ahorro importante de energía y recursos.
Para subrayar la obligación de eliminar por separado estos equipos, en el producto aparece un contenedor de basura tachado.

P **ADVERTÊNCIA PARA A ELIMINAÇÃO CORRECTA DO PRODUTO NOS TERMOS DA DIRECTIVA EUROPÉIA 2002/96/CE**

No fim da sua vida útil, este equipamento não deve ser eliminado juntamente com o lixo doméstico.
Deve ser depositado nos centros especializados de recolha diferenciada locais ou nos revendedores que forneçam este serviço.
Eliminar separadamente um equipamento eléctrico e electrónico permite evitar possíveis conseqüências negativas para o ambiente e para a saúde pública resultantes de uma eliminação inadequada, além de que permite recuperar e reciclar os materiais constituintes para, assim, obter uma importante poupança de energia e de recursos.
Para assinalar a obrigação de eliminar estes equipamentos separadamente, o produto apresenta a marca de um bidão do lixo com uma cruz por cima.

GR **Προειδοποιήσεις για τη σωστή διάθεση του προϊόντος σύμφωνα με την Ευρωπαϊκή Οδηγία 2002/96/ΕΚ**

Στο τέλος της ωφέλιμης ζωής του, το προϊόν δεν πρέπει να διατίθεται με τα αστικά απορρίμματα.
Μπορεί να διατεθεί σε ειδικά κέντρα διαφοροποιημένης συλλογής που ορίζουν οι δημοτικές αρχές, ή στις αντιροσωπείες που παρέχουν αυτήν υτηρεσία. Η διαφοροποιημένη διάθεση μιας ηλεκτρικής συσκευής επιτρέπει την αποφυγή πιθανών αρνητικών συνεπειών για το περιβάλλον και την υγεία από την ακατάλληλη διάθεση καθώς και την ανακύκλωση υλικών από τα οποία αποτελείται ώστε να επιτυγχάνεται σημαντική εξοικονόμηση ενέργειας και πόρων. Για την επισήμανση της υποχρεωτικής χωριστής διάθεσης, το προϊόν φέρει το σήμα του διαγραμμένου τροχοφόρου κάδου απορριμμάτων.